



## Installation Manual

### Notes:

1. This unit is for vehicles with 12V DC only.
2. Unit should be installed by a professional auto technician.
3. Route wiring harness away from heat sources and electrical components.
4. Power loom connections should be soldered and insulated.
5. Perform test after finishing the installation.



### A. Components

ECU, two transmitters, shock sensor,  
LED indicator, siren, harness, antenna.

### B. Technical parameters

Voltage: 12V  
Static current: <20mA  
Frequency: 433.92MHz  
Siren SPL: 105-125 dB

### C. Factory setting

- |                        |                        |
|------------------------|------------------------|
| 1. ☑ Electric lock     | ☐ Vacuum lock          |
| 2. ☑ Passive arm       | ☐ Active arm           |
| 3. ☑ Engine immobilize | ☐ No engine immobilize |
| 4. ☐ Indicators flash  | ☑ No indicators flash  |

